

# wellcare



## 3 Barrel Hair Waver

### User Manual

Model Number TB-1780LCD



# Contents

- 03      Important Safety Instructions**
- 07      Product Overview**
- 08      Operation**
- 09      Temperature Setting**
- 10      Specifications**

# Important Safety Instructions

## READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner of the product.

Use this appliance to curl human hair only. Do not use this appliance on artificial hair or animals.

**IMPORTANT!** The appliance may have different results depending on hair type. Therefore, we recommend to do a trial at a hidden spot before first use. Not recommended on damaged or bleached hair.

## SAFETY PRECAUTIONS:

- Do not place near edge of a bench or table during operation.
- Ensure the surface is dry, level, clean and free of liquid and other substances
- Do not leave the appliance unattended when in use. Always ensure the appliance is switched off and unplugged.
- Fully unwind the cord before use.

- To protect against electric shock, do not immerse the power cord, plug or appliance in water or any other liquid.
- Do not allow the cord to hang over the edge of the table or bench, touch hot surfaces or become knotted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- If the supply cord is damaged, do not use. Any repairs to the product must be carried out by qualified electrical person only or the product must be disposed of.
- This product is intended for household use only, not designed for commercial industrial purposes. Do not use it outdoors.
- NEVER grasp the appliance, power cable or power plug with wet hands.
- Always remove the power cable from the socket by pulling on the plug, do not pull the cable itself.
- Please do not attempt to dismantle the appliance.
- When appliance is used in bathroom, unplug after use since proximity of water presents a hazard when appliance is switched off.
- Do not use outdoors when aerosol (spray) products are being used or where oxygen is being administered.

## CARE, CLEANING AND STORAGE

- **ATTENTION:** turn off the appliance before cleaning and disconnect the plug from the power outlet.
- **ATTENTION:** do not use any alcohol, acetone, gasoline, abrasive cleaning objects to clean the plastic components. Do not use hard brushes or metal objects for cleaning.
- **RISK OF BURNING!:** do not attempt to clean the appliance while it is still hot.
- Wipe the appliance with a dry cloth.
- Never submerge the appliance in water or let water run over the heating plates or the appliance.
- The heating plates can be cleaned with a damp cloth. Dry thoroughly after cleaning.
- Store the appliance in a cool, dry location, away from children and pets.
- After use, do not wrap the cord around the appliance as it may cause the cord to fracture.

## ELECTRICAL SAFETY

- Do not leave the appliance unattended.
- To avoid a build-up of heat, NEVER cover the appliance. Do not use the appliance under a blanket or other poorly ventilated locations.
- Avoid addition of heat from other sources like direct sunlight and other heating appliances.
- Do not use an extension cable.

- For additional protection, the installation of a residual current device (RCD/ Safety switch) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the product. If unsure, check with your electrician.



**CAUTION!** Risk of Burning! The appliance gets very hot during use! Only touch the handle and switch. Avoid all contact with ears, eyes, face and neck. Never touch the heating tongs.




**WARNING!** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



Class II appliance.

## Product Overview

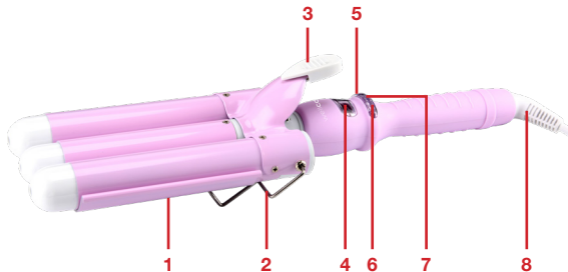

1. Curling barrels
2. Stand
3. Barrel clamp lever
4. LCD display
5. Increase temperature: press repeatedly to increase the temperature of the barrels.
6. Decrease temperature: press repeatedly to lower the temperature of the barrels. Press and hold to lock/unlock.
7. On/Off switch: press and hold to turn the device on. The LCD display will light up when on. Press and hold the switch again to turn the device off.
8. Power cord

## Operation

- Connect the power cord to a power source.
- Press and hold the on/off switch until the LCD display lights up, indicating the device is on.
- Start with the lowest temperature setting (80°C) by pressing the decrease temperature button repeatedly.
- Wait until the barrel has reached the set temperature.
- Press the barrel clamp lever to open the clamp. Take a section of hair no more than 3cm wide. Place the hair strands between the barrel and the clamp, then release the clamp lever so that the hair is fixed.
- Rotate the handle so that the strand of hair is rolled up.
- Comb and clamp each section of hair, holding for 2-5 seconds.
- Repeat this until satisfied with the desired hair waves.
- Let your hair cool before styling or brushing, as this will help you to prolong the wave style.

### Notes:

- It is recommended to first test it on a strand of hair to check that the temperature is appropriate for your hair.
- For optimal results, wash your hair with shampoo and conditioner, then dry your hair thoroughly and ensure it is tangle free prior to styling.
- The barrels must be kept at a minimum distance of 30-50mm from the roots of your hair to avoid burn.



## Temperature Setting

Please see below for recommended temperature settings for the hair type.

Temperature	Hair Type
150°C - 170°C	Thin/fine, damaged or bleached hair
180°C - 190°C	Normal hair
210°C	Thick hair

## Specifications

Input Voltage	AC 220-240V, 50Hz
Power Consumption	130W
Temperature Range	80°C - 210°C
Weight	580g (approx)
Dimensions (mm)	385 x 105 x 75

For Technical and Warranty Support

1300 886 649

[tempo.org/support](http://tempo.org/support)

Distributed by Tempo (Aust) Pty Ltd,  
PO Box 132, Frenchs Forest NSW 1640

## Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.2.23 for electrical safety.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

## Notes

# wellcare

## Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

## Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 132 Frenchs Forest NSW 1640

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: [tempo.org/support](mailto:tempo.org/support)